


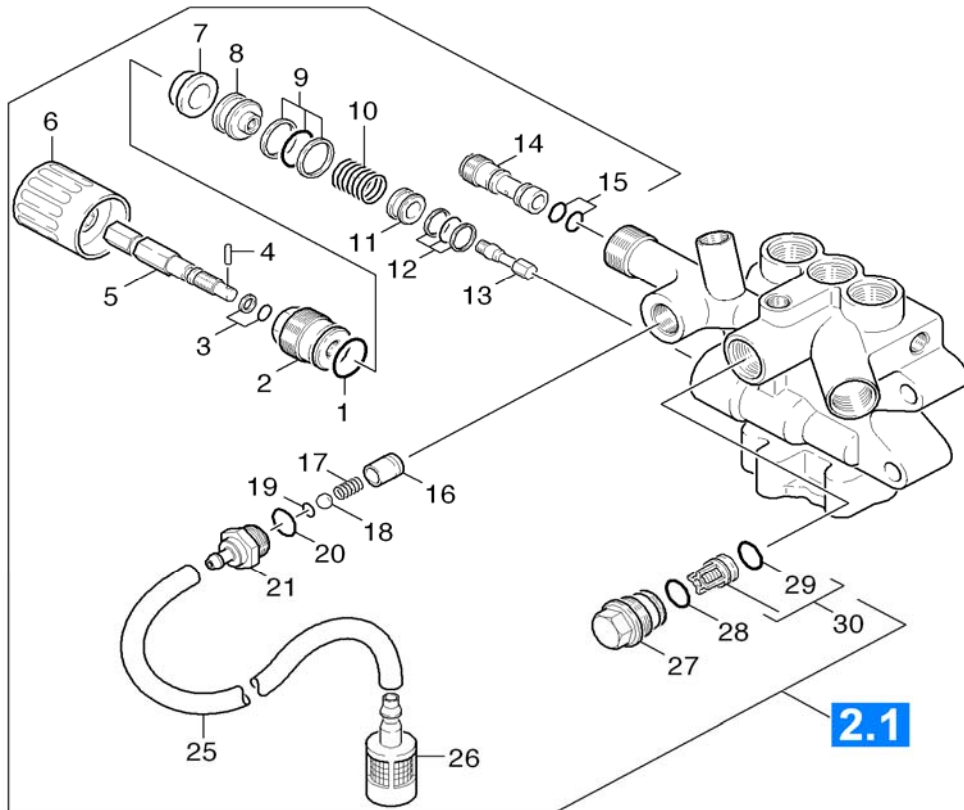

4591-040C SPILL VALVE INSTRUCTIONS



Parts 8 - 9 - 10 - 11 - 12 - 13 make up Part # 4591-040C Spill (Unloader) Valve

Remove Spill Valve by grasping the knob at the top of the valve (# 8) with a needle-nose vice grip and pulling straight up. The Spill Valve is seated in the housing with 2 sets of o-rings (#'s 9 & 12) so there will be a slight resistance.

When the valve is removed use a damp cloth to clean the valve and verify that there are no cuts, tears or damage to the o-rings. If possible clean and inspect the bore in the housing for pits or build up.

Next lubricate the top set of 3 o-rings (# 9) of the Spill Valve generously with silicone grease; **DO NOT LUBRICATE THE LOWER SET OF 3 O-RINGS (# 12)**. The lower 3 o-rings hold the valve in place. The lubrication on the top 3 o-rings allow the valve to open and close properly. Reinstall the valve and make sure that it is seated all the way to the bottom.

R.J. BOWERS DISTRIBUTORS INC.

2003 Harrison Av
Rockford, IL 61104

WEB: www.rjbowers.com

800-383-6584

FAX: 815-399-8839

e-mail: parts@rjbowers.com