



**1) 2)**  
**TRIGGER GUN**  
**ASSEMBLY**  
**4775-3890**



Shows placement of inside components

Shows placement of inside components with outside housing



**3)**

Insert large spring inside grooves at end of barrel



**4)**

Insert trigger handle into housing



**5)**

Place long, black outlet tube inside spring and trigger handle. Place white bushing end with 2 o-rings into outlet tube through trigger handle.



**6)**

Place small spring inside inlet tube, 45 degree angle end then place inside white bushing end with single o-ring. Reassemble outer housing.

**R J Bowers Distributors**  
 2003 Harrison Ave  
 Rockford IL 61104  
 E-mail: [service@rjbowers.com](mailto:service@rjbowers.com)  
 Web: [www.rjbowers.com](http://www.rjbowers.com)  
 (815) 399-8839 (800) 383-6584