




Model K 2401

Part No. 1.194.905 0

High Pressure Washer Operator Manual

Overview	1
Precautions	1-2
Assembly Instructions	3
Operating Instructions	4
Using the Accessories	5
Working with Detergents	6
Shut Down and Clean-Up	7
Taking a Break	7
Winterizing and Long-Term Storage	7
Clearing Tips	8-9
Optional Cleaning Accessories	9
Troubleshooting	10-11

In USA Call:
1-800-537-4129
or visit our website:
www.karcher-usa.com

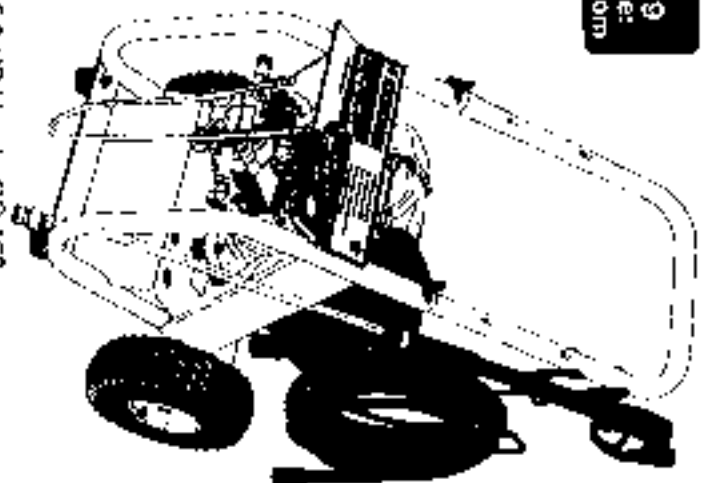

Specifications

Engine	5.0 HP Honda GC 160
Operating pressure	2400 PSI
Water volume	2.5 GPM
Maximum Water Inlet temperature	104° Fahrenheit


Model K 2401 OVERVIEW

Item Description

1. High pressure outlet
2. Water inlet with garden hose connector and filter
3. Detachable suction tube
4. Knob Assembly (two each, Bolt & Knob)
5. High pressure hose
6. Detergent sizer
7. Handle
8. Trigger gun
9. Trigger gun safety lock
10. Full start (not included)
11. Gas tank
12. Oil fill cap (not pictured)
13. Spray wand with quick connect adapter
14. Quick connect nozzles (5)
15. Gunhose storage handle
16. Detergent tray
17. Operator manuals
18. Hose reel mounting holes

Features:

- Thermal release valve

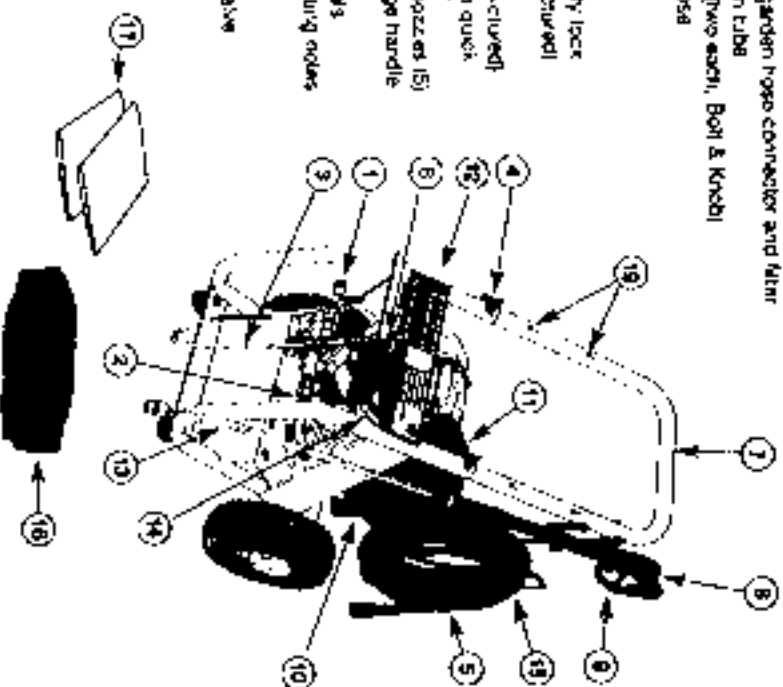

NEVER!

- Never** point nozzle at people or animals.
- Never** drink alcohol or use drugs while operating this equipment.
- Never** spray electrical connections, electrical outlets or fixtures.
- Never** add fuel with the engine running or operate when the fuel has been spilled.
- Never** touch hot surfaces or allow accessories to contact hot surfaces.
- Never** operate in an enclosed space, exhaust fumes are dangerous.
- Never** operate near children with open flames.
- Never** operate pressure washer without the water turned on.
- Never** use hot water.

IMPORTANT PRECAUTIONS – Read First!

⚠ Safety Warnings

When using this product, basic precautions should always be followed:

- Read all the instructions before using the product.
- Fire hazard! Do not add fuel with the engine running. Do not operate if fuel has been spilled. Instead, move the machine to a different location and avoid creating sparks.
- Operate and fuel machine in a well vented area, free of devices featuring an open pilot or flame such as boilers, water heaters, etc.
- High pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, animals, electrical devices, or the machine itself.
- Wear safety goggles.
- Do not use acids, alkaline solvents, or any flammable material in this product. These products can cause physical injuries to the operator and irreversible damage to the machine.
- The machine has hot surfaces which can cause burns. Operate the unit in a safe environment and away from children.
- Do not allow the high pressure hose to come into contact with the rubber guard.
- Do not leave the machine running unattended.
- Learn how to stop the machine and release pressure quickly. Be thoroughly familiar with the controls.
- Stay alert — watch what you are doing.
- Do not operate the product when fatigued or under the influence of alcohol or drugs.
- Do not stand on unstable surfaces. Stand with both feet balanced at all times.
- Avoid stepping the machine on its side.
- The Gun Safety Lock PREVENTS the trigger from accidentally being engaged. The safety feature DOES NOT lock trigger in the on position.

Water Supply (Cold Water Only)

- Water hose must be at least 3/4 inch in diameter.
- Flow rate of water supply must not fall below 2.5 GPM (gallons per minute).
- Flow rate can be determined by running the water for one minute into an empty 5 gallon container.
- The water supply temperature must not exceed 104°F/40°C.
- Never use the pressure washer to draw in water contaminated with solvents, e.g. paint thinners, gasoline, oil, etc.
- Always prevent debris from being drawn into the unit by using a clean water source.


We strongly recommend that the high pressure washer not be left running for periods of 5 minutes or longer without the trigger gun being engaged.

This Karcher high pressure washer is equipped with thermal protection to extend the life of your pressure washer. The thermal protector will automatically activate at a predetermined high temperature blocking hot water before resetting. This ensures that the pump does not become damaged.


⚠ Caution

- Follow the maintenance instructions specified in the manual.
- This machine has been designed for use with cleaning detergents supplied or recommended by the manufacturer. The use of other cleaning detergents may affect the operation of the machine and void the warranty.


ASSEMBLY INSTRUCTIONS

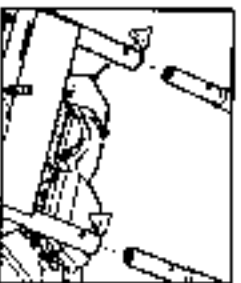


Step 1 Attach the handle to the frame of the pressure washer. Align holes, insert bolts, and tighten with knobs.

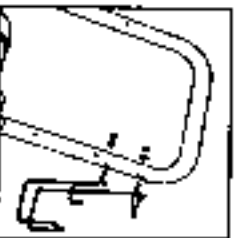


Step 2 Attach the gun hose storage ramp.

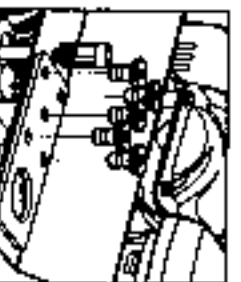

Step 3 Place the quick connect nozzles in the nozzle holder.

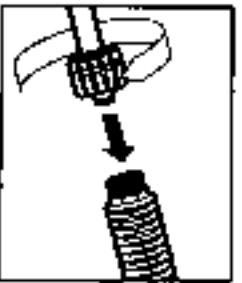


Step 4 Attach the wand to the spray gun.

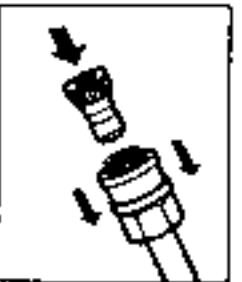


Step 5 Pull the spring loaded collar of the wand back to insert your choice of quick connect nozzle.



Step 6 Release the collar and push the nozzle until the collar clicks. Pull the nozzle to make sure it is seated properly.

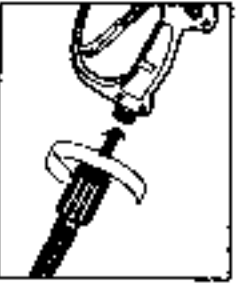

Step 7 Attach the high pressure hose to the spray gun.

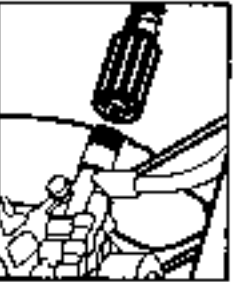

Step 8 Connect the high pressure hose to the unit's high pressure outlet.



Step 9 Connect the garden hose to unit's water inlet.

Important! Do not run the engine with a light or low oil level as this can cause engine damage. If you have further questions regarding the engine, please refer to the engine's operating manual included with the unit.

You are now ready to operate your Kärcher Pressure Washer


OPERATING INSTRUCTIONS




Step 1 Check oil level! Oil level should be level with the bottom of the oil filler neck. Be sure the machine is level when checking the oil level. Refer to the engine's operating manual for seasonal gradual. We recommend that the oil be changed after the first 5 hours of use, then once every 50 hours. **Warning!** Improper oil levels will cause low oil sensor to shut off engine.



Step 2 Fill gas tank with unleaded gasoline. Do not use leaded gasoline. Never use hot water.

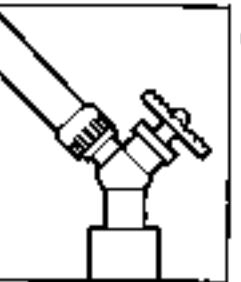


Step 3 Connect garden hose to the cold water source and turn water on completely. Never use hot water.

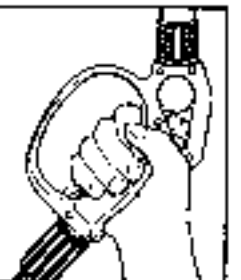


Step 4 Trigger the gun to eliminate trapped air, wait for a steady flow of water to emerge from the spray nozzle.



Step 5 Save the choke lever out to the closed position for a warm engine, leave the choke lever in the open position.

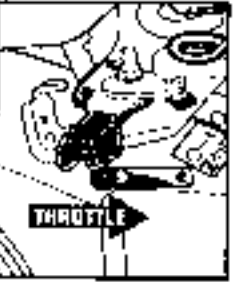


Step 6 Slide the throttle lever up about 1/3 of the way toward the fast position.

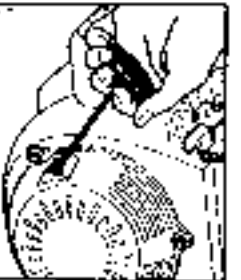

Step 7 Pull the starter handle. If the engine fails to start after 3 pulls, squeeze the trigger gun to release pressure, and repeat steps. After the engine starts up enough to run smoothly, move choke to open position and throttle to fast position.

USING THE ACCESSORIES

The five color-coded quick-connect nozzles provide a wide array of spray widths from 0° to 85° and are easily accessible when placed in the convenient rubber nozzle holder, which is cranked on the front of the machine.

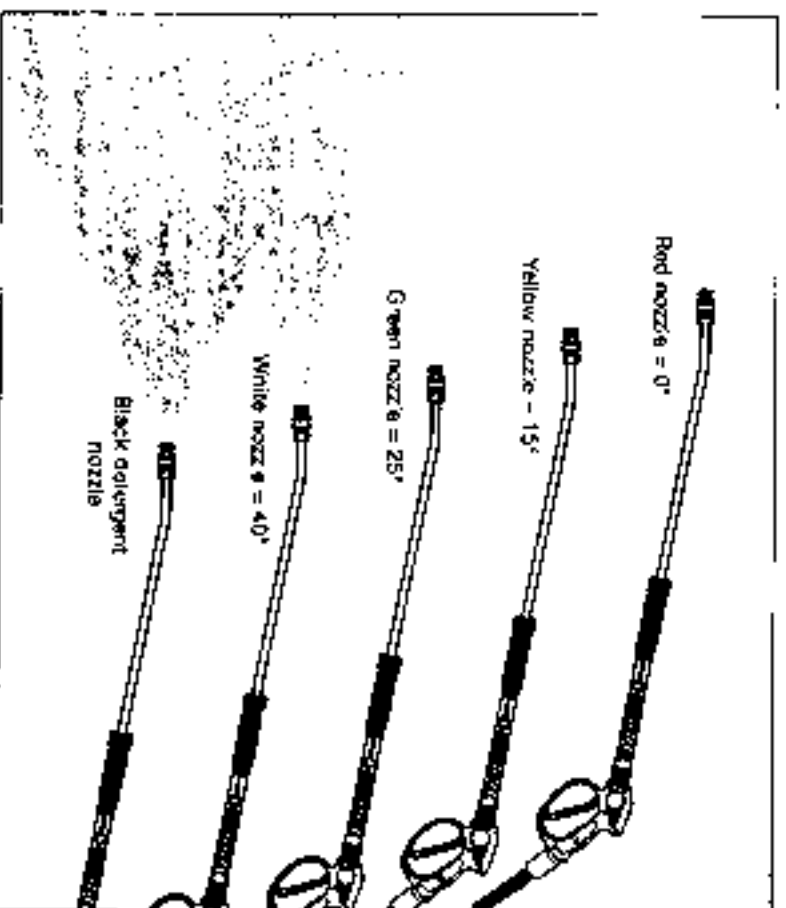


WARNING
TO AVOID SERIOUS INJURY,
NEVER POINT SPRAY NOZZLE
AT YOURSELF, OTHER PER-
SONS OR ANIMALS.

WORKING WITH DETERGENTS

Detergents can only be applied with the black nozzle.


Step 1 Install the black quick-connect low pressure nozzle for detergent application at low pressure.

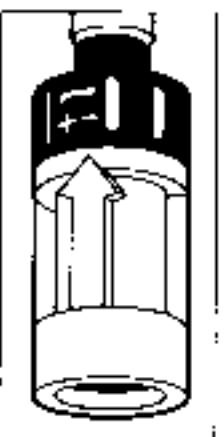


Step 2 Adjust the liner end of the detergent tube for light (+) or maximum (-) detergent coverage.



Step 3 Fill a container with Kärcher detergent. Place the filter end of detergent suction tube into the detergent.

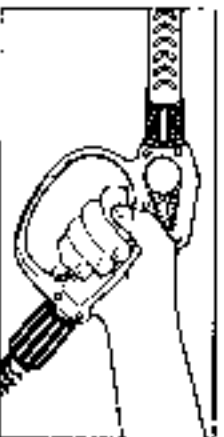

Step 4 With the engine running, pull trigger to operate unit. Liquid detergent is drawn into the unit and mixed with water. Apply detergent to work area. Do not allow detergent to dry on surface.

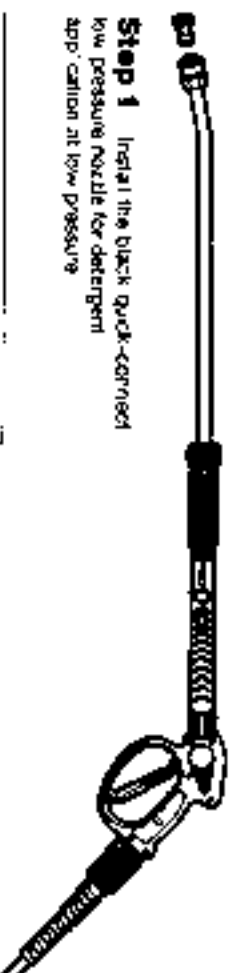

For best results see **Cleaning Tips** on pages 8 & 9 or included cleaning guide for specific information on how to clean different surfaces. **Always Use Kärcher Detergents for Best Results.**

Kärcher biodegradable detergents are specifically formulated to protect the environment and your pressure washer. The special formula won't clog the suction tube filter and will protect the internal parts of the pressure washer for a longer life. For Kärcher Detergents, check your retailer or call:

In USA Call:
1-800-537-4129
or visit our website:
www.karcher-usa.com

The following Kärcher detergents are available:

LOGJIS	TAB-LTS
Teak Oil	Ice-Cleaner
Vehicle Wash	All Purpose
House Wash	Degreaser
Degreaser	Deck and Patio
Deter Wash	Windows and Screens
All Purpose Cleaner	Vehicle Wax


Caution

Never use:

- Bleach, Chlorine products and other corrosive chemicals
- Liquids containing solvents
- Tri-sodium phosphate products
- Ammoniac products
- Acid-based products

These chemicals will harm the unit and will damage the surface being cleaned.


SHUTTING DOWN & CLEAN-UP

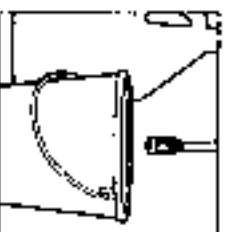


Step 1 Remove the detergent suction tube from the throttle down to the throttle down to stop the engine. Siphon water at low pressure for one minute.



Step 2 Press the throttle down to stop the engine.

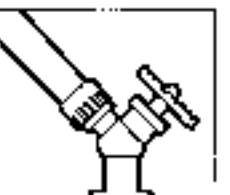

Step 3 Turn off water supply.

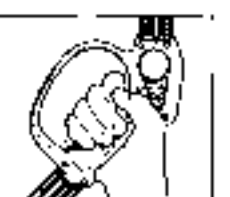


Step 4 Press trigger to release water pressure.



Step 5 Disconnect the gas hose from the water inlet of the unit.



Step 6 Disconnect the high pressure hose from the high pressure out of the unit.

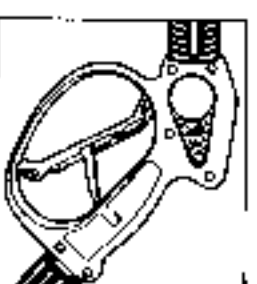

Step 7 Engage the gun safety lock.


TAKING A BREAK... five minutes or more



Step 1 Suck the throttle down to stop the engine.



Step 2 Press trigger to release water pressure.

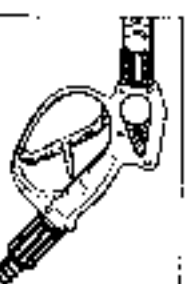

Step 3 Engage gun safety lock.

WINTERIZING AND LONG-TERM STORAGE

1. Disconnect all water connections.
 2. Turn on the machine for a few seconds, until the remaining water exits. Turn off immediately.
 3. Drain the gas and oil from the engine.
 4. Do not allow high pressure hose to become kinked.
 5. Store the machine and accessories in a room which does not reach freezing temperatures.
- Caution:** Failure to follow the above directions will result in damage to the pump assembly and accessories.

CLEANING TIPS

Deck Cleaning

(with or without detergent)

Pre-arse deck and surrounding area with fresh water. If using Karcher Deck and Patio Cleaner, place detergent suction tube directly into clearing solution and apply to surface at low pressure. For best results, let 1 hour work area to smaller sections of 800sq. ft. approximately 25 square feet. Allow Karcher Deck and Patio Cleaner to remain on surface 1-3 minutes. Do not allow detergent to dry on surface. Rinse at high pressure in a long sweeping motion keeping the spray nozzle approximately 3-6 inches from the cleaning surface. Always clean from top to bottom, and from left to right. When moving on to a new section of the cleaning surface, be sure to overlap the previous section to eliminate stop marks and ensure a more even cleaning result.

House Siding

(with or without detergent)

Pre-arse cleaning surface with fresh water. If using Karcher House or Window and Siding Cleaner, place detergent suction tube directly into clearing solution and apply to surface at low pressure (for best results, limit your work area to sections of approximately 6' feet and always apply detergent from bottom to top). Allow Karcher House or Window and Siding Cleaner to remain on surface 1-3 minutes. Do not allow detergent to dry on surface. If surface appears to be drying, simply wet down surface with fresh water. If needed, use special Wash Brush Attachment to remove stubborn dirt. Rinse at high pressure from top to bottom in air over sweeping motion keeping the spray nozzle approximately 6 inches from the cleaning surface.

Cement Patios, Brick and Stone

(with or without detergent)

Pre-arse cleaning surface with fresh water. If using Karcher Deck and Patio or All Purpose Cleaner, place detergent suction tube directly into clearing solution and apply to surface at low pressure. For best results, limit your work area to smaller sections of approximately 25 square feet. Allow Karcher Deck and Patio or All Purpose Cleaner to remain on surface 1-3 minutes. Do not allow detergent to dry on surface. Rinse at high pressure in a sweeping motion keeping the spray nozzle approximately 3-6 inches from the cleaning surface. Always clean from top to bottom, and from left to right.

Cars, Boats & Motorcycles

(with or without detergent)

Pre-arse vehicle with fresh water. 1. Using Karcher Vehicle or All Purpose Cleaner, place detergent suction tube directly into clearing solution and apply to surface at low pressure. For best results, clean one side of vehicle at a time and always apply detergent from bottom to top, do not allow detergent to dry on surface. If needed, use special Wash Brush Attachment to remove stubborn dirt. Rinse at high pressure in a sweeping motion keeping the spray nozzle approximately 6 inches from the cleaning surface. Distance should increase when using pre-rinsing or other sensitive surfaces). Always clean from top to bottom and from left to right. For best results, wipe surfaces dry with a carwash or soft dry cloth.

CLEANING TIPS – continued

Barbecue Grills, Outdoor Power Equipment & Gardening Tools

(with or without detergent)

Pre-soak cleaning surface with fresh water 1 using Kärcher All Purpose Cleaner or Detergent. Place detergent suction tube directly into cleaning solution and apply detergent at low pressure. Allow Kärcher detergent to remain on surface 1-3 minutes. Do not allow detergent to dry on surface. Rinse at high pressure keeping the spray nozzle approximately 3-6 inches from the cleaning surface. Do not over-apply extremely stubborn dirt. It may be necessary to move the spray nozzle even closer to the surface for greater dirt-culling action. To remove caked-on mud from garbage cans, lawn mower blades, wheel barrows or other non-sensative metal surfaces, you may want to use the Kärcher Dribbler® Nozzle. **Caution: Do not use Dribbler® spray nozzle on cloth, plastic or other sensitive surfaces as it may cause damage.**

Patio & Lawn Furniture

(with or without detergent)

Pre-rinse furniture and surrounding area with fresh water. If using Kärcher All Purpose Cleaner, place detergent suction tube directly into cleaning solution and apply to surface at low pressure. Allow Kärcher All Purpose Cleaner to remain on surface 1-3 minutes. Do not allow detergent to dry on surface. Rinse at high pressure in a sweeping motion keeping the spray nozzle approximately 3-6 inches from the cleaning surface. For best results, clean from top to bottom and from left to right.

Caution: Do not use Dribbler® nozzle on patio or lawn furniture as it may cause damage.

Recommendations:

- Before cleaning any surface an inconspicuous area should be cleaned to test spray pattern and distance for maximum cleaning results.
- If painted surfaces are peeling or chipping, use extreme caution as pressure washer may remove the loose paint from the surface.

OPTIONAL CLEANING ACCESSORIES

Optional cleaning accessories are available to further enhance your cleaning capabilities. See accessories order form for product descriptions and ordering instructions.

- DirtMaster® nozzle
- Extension Wand SP
- Rotating Wash Brush
- Wet Sand Blasting Attachment
- Hose Reel
- Page Drain Cleaner
- Extension Hose 30
- Surface Cleaner
- Wash Brush

In USA Call:

1-800-537-4129

or visit our website: www.karcher-usa.com

TROUBLESHOOTING

Disconnect the machine from the power source before making any repair.

Symptom	Cause	Solution
Engine will not start.	No gasoline.	Fill gas tank.
	Choke is not in correct position.	Slide choke lever out to closed position.
	Engine throttle is not in correct position.	Slide the throttle lever up about 1/3 of the way toward the fast position.
Unit does not reach high pressure.	Pressure built up in the trigger before washing.	Squeeze the trigger to release the pressure.
	Diameter of garden hose is too small.	Replace with a 3/2 inch garden hose.
	Water supply is restricted.	Check garden hose for kinks, leaks and blockage.
Water does not reach high pressure.	Not enough inlet water supply.	Open water source full force.
	Water inlet filter is clogged.	Remove filter and rinse out in warm water.
	Block detergent nozzle is inserted.	Remove block detergent nozzle and attach a high pressure nozzle.
Output pressure varies high and low.	Not enough inlet water supply.	Turn water or full force. Check garden hose for kinks, leaks or blockage.
	Air and sucking air.	Check that hoses and fittings are air tight. Turn off machine and purge pump by squeezing trigger gun. Use a steady flow of water emerges through the nozzle.
	Water inlet filter is clogged.	Remove filter and rinse out in warm water.
Discharge nozzle is obstructed.	Blow out or remove debris with a fine needle.	
	Collapsed gun hose or spray wand.	Rinse dirt out of trigger through detergent suction hose.

TROUBLESHOOTING – continued

Symptom	Cause	Solution
No detergent	Detergent suction tube not properly connected to the machine	Check connection.
	Detergent is too thick	Make detergent. For best results, use Kärcher detergent.
	Detergent filter valve is at lowest setting.	Set detergent filter valve to a higher setting.
	Fiber on detergent suction tube is clogged	Rinse warm water through filter to remove debris.
	Dislodged or clogged detergent suction tube	Remove obstruction or replace detergent suction tube.
	A high pressure nozzle is attached.	Replace with black detergent nozzle.
Garden hose connection leaks.	Detergent nozzle is obstructed.	Blow out or remove debris with fine needle.
	Loose fittings.	Tighten fittings.
Spray wand leaks.	Washer/gymnastic rubber washer.	Insert new washer.
	Spray wand not properly attached	Slide the spray wand into the gun. Turn the wand collar clockwise onto the gun threads until tight.
Pump is noisy.	Broken O ring	Call Kärcher customer service hotline and order an O-ring.
	Pump is sucking air.	Check that hoses and fittings are air tight. Turn off machine and pump. Pump by squeezing trigger gun until a steady flow of water emerges through the nozzle.
Water leaks from pump.	Loose fittings	Check that all fittings are tight.
	Washer seals are damaged or worn	Call service center.
DIY Drip.	Thermal protection device is activated.	Thermal protection device will auto reset.
	O-ring seals are damaged or worn.	Call service center.

In Use Care
1-800-537-4129
 or visit our website: www.karcher-usa.com

If you encounter any additional difficulties not listed, please call our service center for help.